


## Window Trim & Moulding

Window trim and Mouldings can bring a window to life. Resembling pre-cast concrete with its subtle textures, these can be installed in minutes with just a few tools.

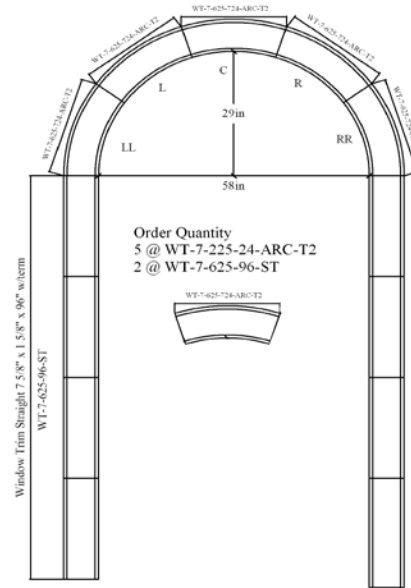

### Application and Ordering Notes:

For Arch window applications as seen above, you need to know the width of your window to order the correct arch pieces and they are applied end to end, with a grout line on one side of each piece and a flat side. You will also need to straight pieces to be installed vertically.

For Square window applications you can either use corner pieces to keep the grout lines symmetrical, or you can cut the straight pieces at a 45 degree angle. Just be considerate of how the grout joints line up to avoid splices and give a great finished appearance.



Window Trim Arch 1



Window Trim Arch 2

WT-7-24-SFTARC

Window Trim Full Arch 7-5/8,  
24 Inch SOFT ARCH

WT-7-24R-ARC

Window Trim Full Arch 7-5/8,  
24 Inch For 5 Foot RO 5pcs per assembly

WT-7-29R-ARC

Window Trim Full Arch 7-5/8,  
29 Inch For 5 Foot RO 4pcs per assembly

WT-7-32R-ARC

Window Trim Full Arch 7-5/8,  
32 Inch For 5 Foot 6 Inch RO 5pcs per assembly

WT-7-35R-ARC

Window Trim Full Arch 7-5/8,  
35 Inch For 6 Foot RO 5pcs per assembly

WT-7-38R-ARC

Window Trim Full Arch 7-5/8,  
38 Inch For 6 Foot 6 Inch RO 6pcs per assembly

WT-7-48R-ARC

Window Trim Full Arch 7-5/8,  
48 Inch For 8 Foot RO 6pcs per assembly

WT-7-625-102-ST Window Trim Straight 7-5/8 x 102 Long

WT-7-625-81-ST Window Trim Straight 7-5/8 x 81 Long

WT-7-625-96-ST Window Trim Straight 7-5/8 x 96 Long

WT-CORNER Window Trim 7-5/8 x 96 Corner



Window Trim Straight - Long View



Window Trim Straight - Close up



Window Trim Corner